



PACKAGING CONTENTS

The following items are included in your package. If you find anything missing, contact the Vocus Phone team.

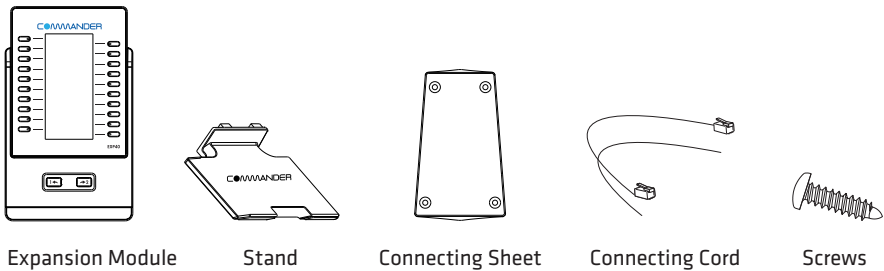


CONNECTING TO THE PHONE

- 1. Connect the EXP40 Sidecar and the phone using the supplied screws and connecting sheet, as shown below:

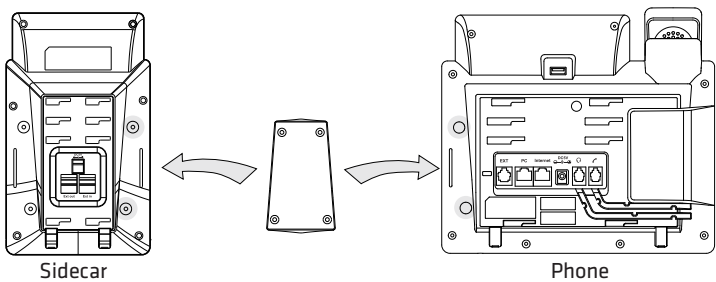


Your Vocus Phone and EXP40 Sidecar will be connected as shown below:

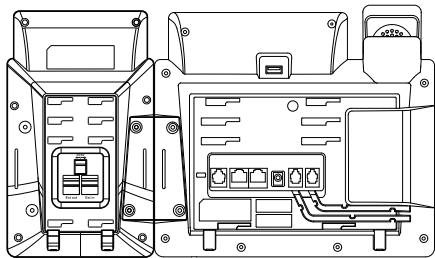


CONNECTING TO TWO EXP40 SIDECAR MODULES

2. Follow the same step to connect the two EXP40 Sidecar modules:

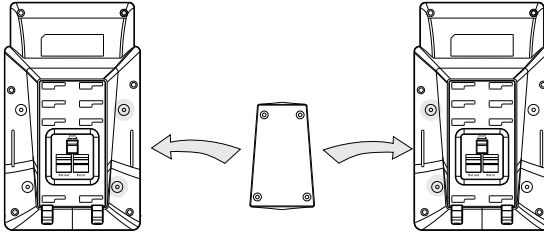

Your phone and the two EXP40 Sidecar modules will be connected as shown below:

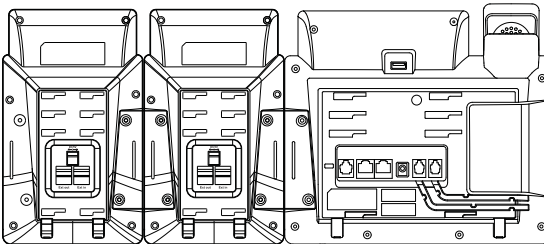


Note: The T46G IP phone can support six expansion modules at most. But if you use more than two modules, you need to connect an additional power adapter to each module.

CONNECTING THE CORDS

3. Connect the EXT jack of the IP phone and the EXT IN jack of the first module using a connecting cord. If you want to connect another module, connect the EXT OUT jack of the first module and the EXT IN jack of the second module using a connecting cord.

As shown below:

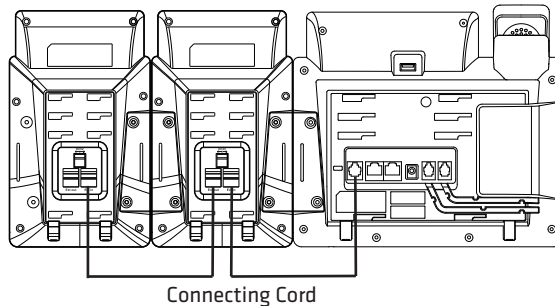

Note: You can connect up to six EXP40 Sidecar modules. To connect them together, connect the EXT IN jack of the module and EXT OUT of the next module with a connecting cable.

You can then attach the stand, power adaptor, Ethernet cable and the handset.

ASSEMBLING THE EXP40

Attach the stand, as shown below:

